

Innovative Strategies for the Road Ahead

VEHICLE MAINTENANCE SCHEDULE - EXAMPLE -



Fleet Forum

Vehicle Maintenance schedule - example

Interval:

A: Maintenance every 5,000km

B: Maintenance every 10,000km in addition to A-maintenance

C:Maintenance every 50,000km or at 24-month intervals in addition to A and B

Action:

I: Inspect – correct or replace as necessary

T: Tighten to specified torque

R:Replace, change or lubricate

Maintenance items	Α	В	С	Remarks
Engine oil and oil filter	R	R	R	In favourable conditions at "B"
Main and pre-fuel filter	R	R	R	In favourable conditions at "B"
Power steering, oil	I	I	R	
Brake and clutch fluids	I	I	R	
All V-belts	I	Ι	R	
Battery and terminals	Ι	Ι	I	Battery, maximum 2 years
Air filter	I	R	R	
Air condition filter	I	I	I	See vehicle handbook
Cooling system fluid	I	I	R	Replace fluid
Washer level and wiper blades	I	I	I	Replace when needed
Leakage on engine and transmission	I	Ι	I	
Gearbox and transmission oil levels	I	Ι	R	Replace oil
Doors, bonnet and luggage hinges	I	I	I	
Fuel lines and pipes	I	I	I	
Brake shoes, drums, linings and pipes	I	Ι	R	Brake shoes and linings only

Note:

This is an example of a maintenance schedule and will vary per vehicle make and model. Make sure to check the owner's manual and consult with the vehicle manufacturer for the most accurate maintenance schedule

Maintenance items	А	В	С	Remarks			
Handbrake and cable	Ι	Ι	I				
Exhaust pipe and muffler	Ι	I	I				
Bolts and nuts on chassis and body	Ι	Т	Т				
Tyres – condition and pressure	Ι	I	R	Replace when needed			
All nipples, steering rod and knuckle	Ι	I	I				
Free wheel hubs	Ι	I	I				
Wheel bearings	Ι	I	R	Replace grease			
Suspension and shock absorbers	Ι	I	I/R	Replace when needed			
Tyre condition and pressure	Ι	Ι	R				
Electrical system	Ι	I	I				
Timing belt	Ι	I	I	See vehicle handbook			
Valve clearance	Ι	I	I	See vehicle handbook			
Injection pump and nozzles	Ι	I	I	See vehicle handbook			
Engine compression			I	See vehicle handbook			
Road test	Ι	Ι	Ι				



Motorcycle service schedule - guidance

Maintenance schedule

Perform the pre-ride inspection in the owner's manual at each scheduled maintenance period.

The following items require some mechanical knowledge. Certain items may require more technical information and tools. Consult your authorised garage dealer.

	Secondary air supply system	
	Evaporative emission control	
	system	
	Final drive oil	
	Brake fluid	
 I: Inspect and clean, adjust, lubricate, or replace if necessary C: Clean R: Replace A: Adjust L: Lubricate 	Brake shoe/pads wear	
	Brake system	I
	Brake light switch	
	Headlight aim	
	Clutch system	I
	Side stand	
	Suspension	
	Nuts, bolts, fasteners	I
	Wheels/tyres	I
	Steering head bearings	Ι

ltems	0.6	4	8	12	16	20	24
	1.0	6.6	12.8	19.2	25.6	32.0	38.4
Fuel line			I		I		I
Throttle operation			I		I		I
Carburettor choke			I		I		I
Air cleaner				R			R
Sub air cleaner				R			R
Crankcase breather		С	С	С	С	С	С
Spark plug		I	R	I	R	I	R
Valve clearance	I		I		I		I
Engine oil	R		R		R		R
Engine oil filter	R		R		R		R
Engine idle speed	I	I	I	I	I	I	I
Radiator coolant			I		I		R
Cooling system			I		I		I
Secondary air supply system			I		I		I
Evaporative emission control system				I			I
Final drive oil			I		I		R
Brake fluid		I	I	R	I	I	R
Brake shoe/pads wear		I	I	I	I	I	I
Brake system	I		I		I		I
Brake light switch			I		I		I
Headlight aim			I		I		I
Clutch system	I	I	I	I	I	I	I
Side stand			I		I		I
Suspension			I		I		I
Nuts, bolts, fasteners	I		I		1		I
Wheels/tyres	I	I	I	I	I	I	I
Steering head bearings	I		I		I		I